


路由器配置方法

1. 先确保进线连接到路由器的 WLAN 口，电脑连接到路由器的 LAN 口。

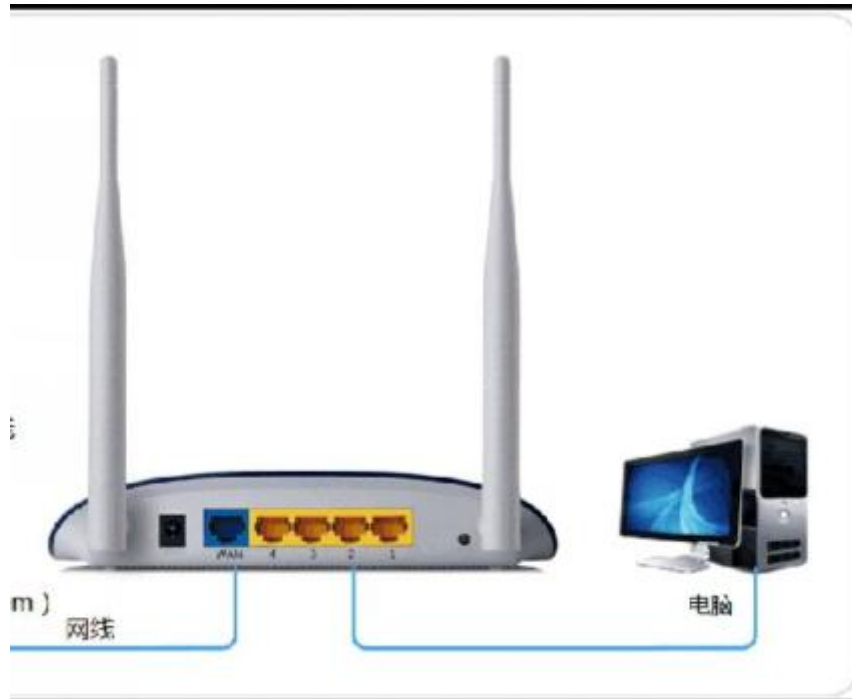


2. 打开电脑桌面右下角的网络图标，点击鼠标右键，打开网络和共享中心。




3. 点击鼠标左键，打开更改适配器设置。



4. 点击鼠标右键，选择状态，打开详细信息。

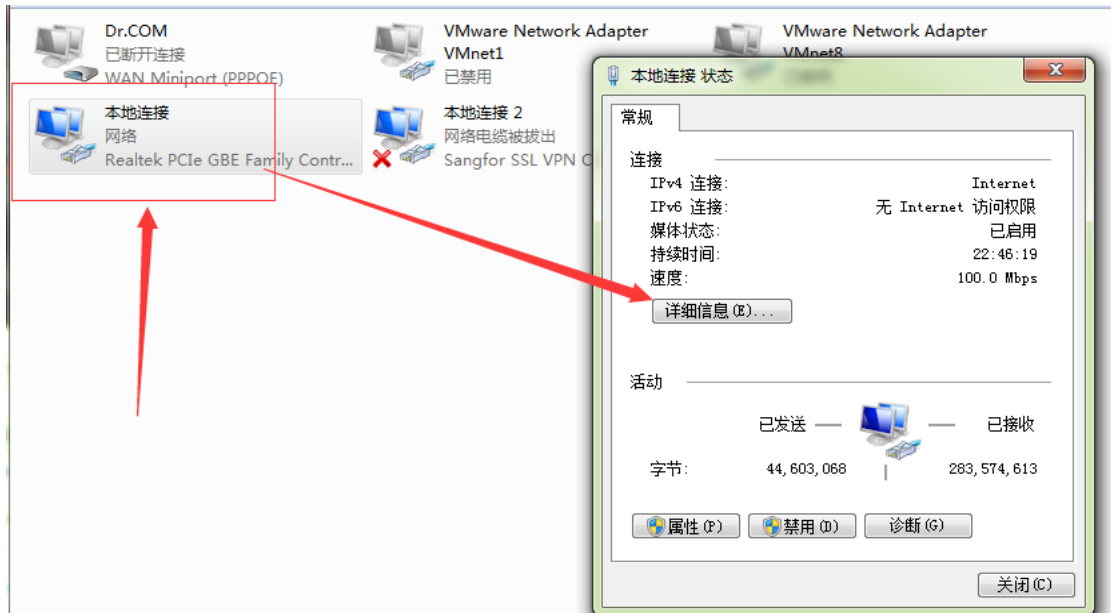

5. 查看默认网关地址，一般情况是 192.168.1.1，已在这里实际看到的为准。

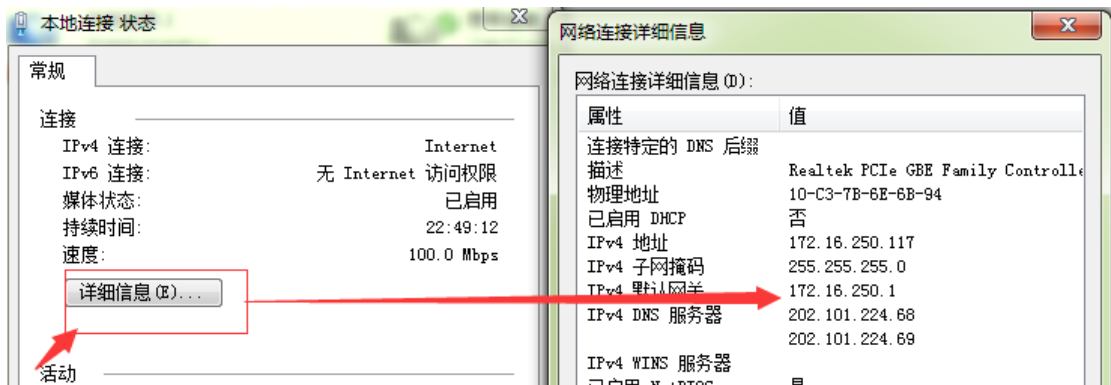

6. 在浏览器你输入上述查看到的默认网关地址。



7. 点击回车键后将弹出登录框，在登录界面，由于初次进入路

由器管理界面，为了保障设备安全，需要设置管理路由器的密码。此时只需要根据页面提示进行操作，设置密码就行了。具体见下图（注意：部分路由器需要输入管理用户名，密码，此处的用户名，密码均输入 admin 即可）。

为保护设备安全，请务必设置管理员密码

设置密码	<p>设置路由器的管理密码</p> <p>6-15位数字、字母（区分大小写）、符号的组合（空格除外），避免使用有规律的纯数字或字母，以提升密码的安全等级，如83\$a56Dfc2%9c</p>
确认密码	<p>再次输入设置的管理密码</p>


注意：确认提交前请记住并妥善保管密码，后续配置设备时需使用该密码进入配置页面，如遗忘，只能恢复出厂设置，重新设置设备的所有参数。恢复出厂设置方法：在设备通电情况下，按住Reset按钮保持5秒以上。

确认


8. 设置完密码，就正式进入路由器管理界面，此时点击页面中的“设置向导”按钮。



9. 点击“设置向导”按钮后会出现一个对话框，此时点击对话框左下角的“下一步”即可。

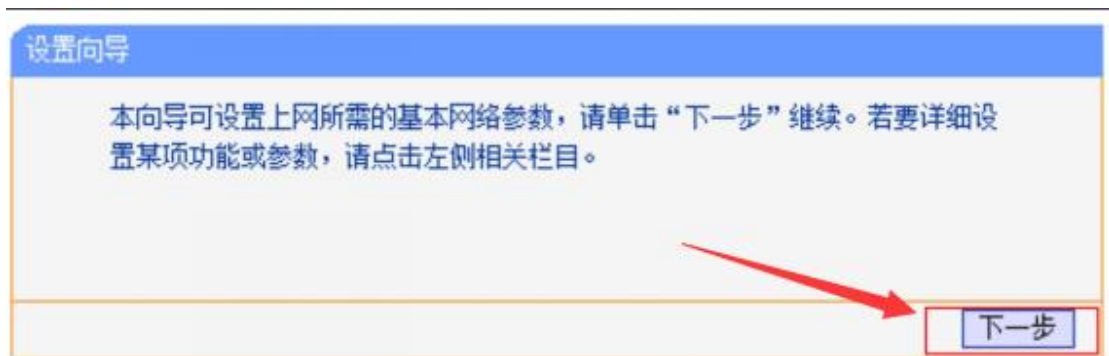

10. 然后又会出现选择上网方式的对话框，这时你需要选择上网方式为：“PPPoE（ADSL 虚拟拨号）”，然后点击“下一步”按钮。

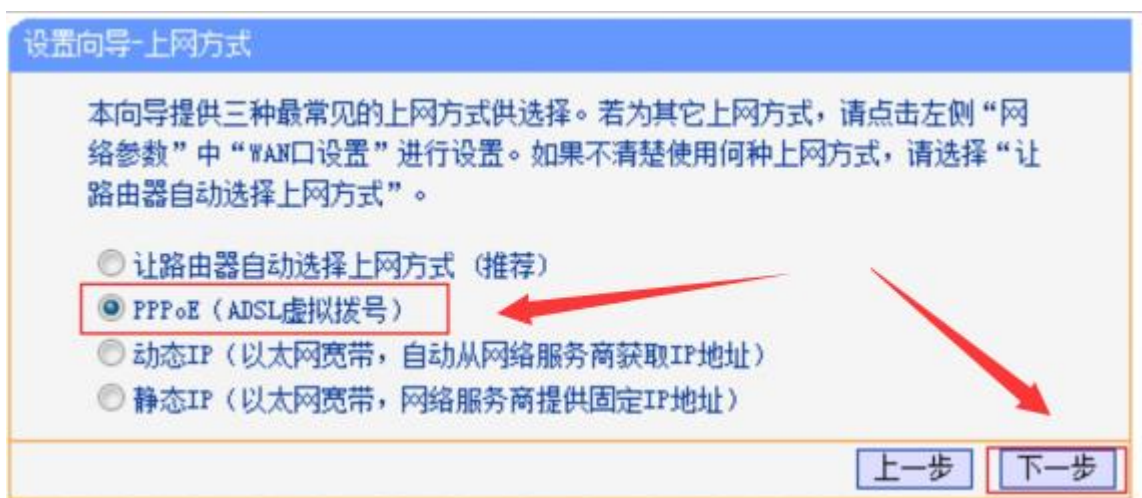

11. 然后会出现一个设置框，在对应设置框中填入运营商提供的宽带账号和密码，并检查该账号密码输入正确。然后在此页面下点击“下一步”按钮。

The screenshot shows a window titled "设置向导-PPPoE". The main instruction is: "请在下框中填入网络服务商提供的ADSL上网帐号及口令，如遗忘请咨询网络服务商。" (Please enter the ADSL username and password provided by the network service provider in the box below. If you forget, please consult the network service provider.)

There are three input fields:

- 上网帐号:** (Username) with the value "07550" and a redacted area. To the right, it says "填写运营商分配的宽带账号" (Enter the broadband account assigned by the operator).
- 上网口令:** (Password) with masked characters. To the right, it says "填写宽带密码" (Enter broadband password).
- 确认口令:** (Confirm password) with masked characters. To the right, it says "请注意字母大小写" (Please pay attention to case).

At the bottom right, there are two buttons: "上一步" (Previous Step) and "下一步" (Next Step).

12. 然后会出现设置 wifi 的昵称 (SSID) 和设置 wifi 密码 (WPA-PSK/WPA2-PSK 密码) 的界面，此界面中你就可以选中"SSID"设置 wifi 昵称，选中“WPA-PSK/WPA2-PSK 密码”设置 wifi 密码。然后点击"下一步"即可。

The screenshot shows a window titled "设置向导 - 无线设置". The main instruction is: "本向导页面设置路由器无线网络的基本参数以及无线安全。" (This wizard page sets the basic parameters and wireless security of the router's wireless network.)

There is one input field:

- SSID:** (Wireless Network Name) with the value "zhangsan". To the right, it says "设置无线网络名称" (Set wireless network name) and "不建议使用中文字符" (It is not recommended to use Chinese characters).

Below this, there is a section for "无线安全选项:" (Wireless Security Options):

- A red instruction: "为保障网络安全，强烈推荐开启无线安全，并使用WPA-PSK/WPA2-PSK AES加密方式。" (To ensure network security, it is strongly recommended to enable wireless security and use WPA-PSK/WPA2-PSK AES encryption.)
- Two radio button options:
 - WPA-PSK/WPA2-PSK**: To the right, it says "设置8位以上的无线密码" (Set wireless password with 8 or more digits). Below this is an input field with the value "12345678" and a note: "(8-63个ASCII码字符或8-64个十六进制字符)" (8-63 ASCII characters or 8-64 hexadecimal characters).
 - 不开启无线安全** (Do not enable wireless security).

At the bottom right, there are two buttons: "上一步" (Previous Step) and "下一步" (Next Step).

13. 然后在出现的页面中点击“完成”按钮，则设置向导完毕。



14. 设置完成后，进入路由器管理界面，点击“运行状态”，查看WAN口状态，若下图框内所指内容IP地址不为0.0.0.0，则表示设置成功。

